



Timeport Bluetooth Clock Speaker



Model TP-42

User Instruction Manual

Thank you for purchasing this Osotto product. We trust that you will be pleased with the quality and design of your new Timeport. Please read this user manual carefully and keep it for future reference.

Unpacking Your Timeport & Getting Started

Inside the carton you will find:


- 1 x Timeport TP-42 Bluetooth Speaker with built-in rechargeable battery
- 1 x Charging Cable
- 1 x Audio cable
- 1 x Instruction Manual

Please charge your Timeport fully before you use it by connecting to a standard 5v USB charger (Max 2.1A). The unit is fully charged when the light goes out.




Please dispose of all packaging responsibly. The cardboard carton should be recycled. Inner packaging is widely recyclable – please check with your local provider.

Top Panel Functions

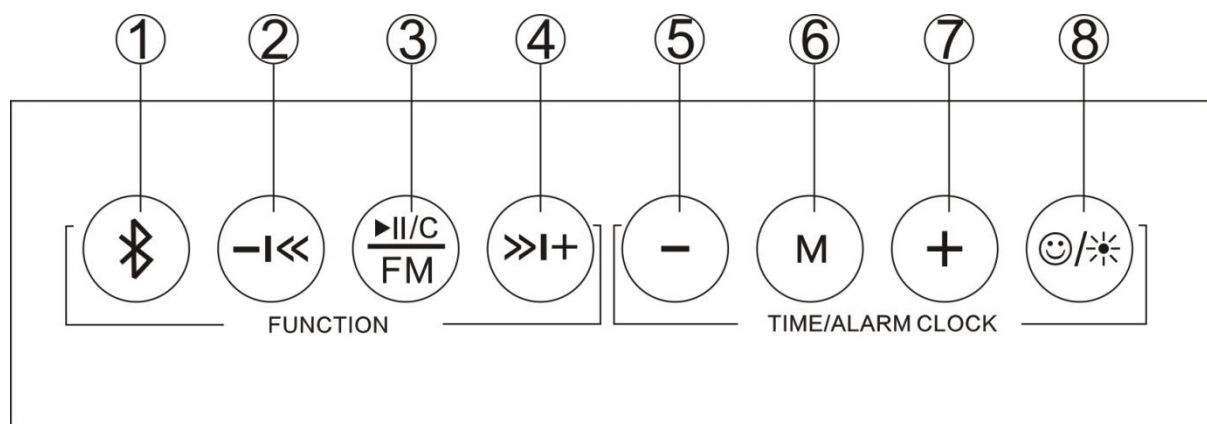

1. Long press to enter Bluetooth mode. Short press to select input mode.
2. Previous song or FM program. Press 3 seconds to decrease volume.
3. Play and Pause key. Long press to choose input sources, including Bluetooth, FM radio, TF card.
4. Next song or FM program. Press 3 seconds to increase volume.
5. Reduce key for setting clock or alarm.
6. Menu key for setting clock or alarm.
7. Increase key for setting clock or alarm.
8. Brightness adjustment. Short press to adjust, press and hold to turn off the display.

Rear Panel

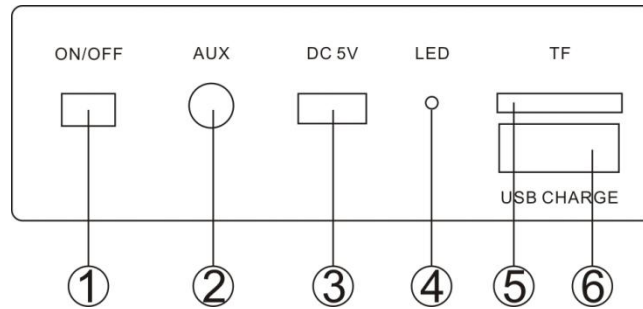

1. ON and OFF power switch
2. AUX in jack
3. DC in jack (Standard 5v micro USB, Max 2.1A)
4. LED indicator: red indicates charging. Charge is complete when lamp goes out.
5. TF card slot
6. USB charging port; use to charge your phone or other smart device with DC5V power.

Bluetooth mode

1. Bluetooth version: Bluetooth 4.2, supports HSP, HFD, A2DP, AVRCP, English prompt tone. Bluetooth pairing name: OSOTTO.
2. Slide the power switch (1) to the “ON” position for power on. The clock icon, battery icon, and alarm clock icon will light up.
3. Long press the “*” button to enter the Bluetooth mode. Long press “*” again to exit the Bluetooth mode.
4. When in Bluetooth Pairing mode, the the display icon will flash until a connection is established. On the device to be paired, search for pairing name “OSOTTO”. When connected, Timeport will confirm, and the icon will gently pulse. Once paired, Timeport will automatically connect the Bluetooth device in future, if no other device is already connected.

TF Mode

1. Turn on the speaker and insert TF card, it will automatically enter into TF mode.
2. The TF icon pulses slowly when playing music.
3. Remove TF card and Timeport will automatically switch to Bluetooth mode.

Line in

1. Insert the AUX cable to the line in mode and the AUX icon will light up without flashing.
2. Pull out the AUX cable, and Timeport will automatically return to Bluetooth mode.

FM mode

1. Long press $\frac{\text{FM}}{\text{FM}}$ to enter FM mode. Timeport has a built-in antenna, and an AUX cable or USB cable can also be used as an external antenna to improve reception.
2. Short press $\frac{\text{FM}}{\text{FM}}$ to search channels. The display icon will be flashing while searching.
3. After Timeport has searched for channels, short press $-|</>|+$ to move between channels. Long press $-|</>|+$ to increase or decrease the volume.

 

Charging

1. Connect the USB cable for charging with a USB charger or power source rated at 5V.
2. The red indicator lamp is lit while charging and will go out when fully charged.


When the battery level is lower than 15%, the icon will be flashing. If the battery is very low,

the speaker will prompt you with an indication voice message before shutting down. The clock function will still be available. Press any key for 3 seconds to display the current time. The clock will retain the right time when the battery is exhausted, and when you recharge Timeport, the correct time will be displayed, unless it has been left uncharged for an extended period.

Get started

Turn on the speaker. You will hear a voice message, then the display will sleep. Press  to wake up and show the time on the display. If you want to use the Bluetooth function, just press  to enter into Bluetooth mode.

Setting the Time

1. When time is being displayed, long press “M” till the hour flashes to enter time setup. Short press “M” to enter the hour and minute setting options, and use the “+/-” buttons to adjust the time.
2. Select 12 hour or 24 hour setting by using the “+/-” keys to switch between “AM” or “PM” or the  icon. Short press “M” to confirm the current setting and automatically move to the next setting option. To finish setup, long press “M” until no icon is flashing.


Alarm clock

1. Short press M to select “Alarm clock 1” mode.
2. Long press M to set alarm clock 1. The hour will flash, and you can use + /- to adjust. Short press M when the hour is set, and the minute will flash. After setting the minute, short press M to move onto the next options to select alarm music, alarm clock circulation, and alarm ON/OFF (see below). Finally, long press M until no icons are flashing to exit the setting mode.
3. Alarm clock 2 setting is same as Alarm clock 1.

Alarm music

There are seven options for the alarm sound. There are five built in tones. Option 6 plays the first song in the TF card, and option 7 plays the FM radio, using the last selected radio program. Press +/- to switch between the options, then short press “M” to set.

Alarm ON and OFF

1. The alarm is ON when the  icon is lit
2. If the icon is not lit, the alarm is OFF. Use the +/- key to toggle between on and off.

Every-day alarm, or once only alarm option

A Circulation icon is used to select a repeating alarm (every day alarm). While the alarm clock

1 icon is flashing, press +/- to choose circulating or not.
The “☺” icon will be displayed when the alarm will sound every day.
No “☺” icon means alarm will sound only one day.

Snooze function

When the alarm sounds, press any key to stop the alarm. If you don't press any key, Timeport will enter snooze mode, and the alarm will sound again after 5 minutes. The alarm will repeat like this 3 times if you do not turn it off by pressing any key. After three cycles, the alarm will stop.

Caution

1. Please reduce the volume to minimum before connecting to audio sources to prevent surge damage to the speakers.
2. Keep Timeport dry and avoid exposure to damp or humid environments.
3. Please do not open the back cover of Timeport as this will invalidate the warranty.
4. Turn off the power switch and unplug charger when not in use for longer periods.

Inside Package

Speaker	1pc
Audio cable	1pc
User manual	1pc
USB cable	1pc
Rechargeable battery	1pc (fixed in speaker)

Responsible End of Life Disposal











Do not dispose in normal household waste. The unit contains a Lithium battery that should be removed before disposal by a competent person and disposed of in accordance with local regulations.

Osotto Ltd
5 High Street
CF37 1QJ
www.osotto.co.uk



Button overview

	AUDIO buttons			
				
Bluetooth	Long press for speaker on/off, short press to select input modes	Short press for previous track, long press for volume down	Short press for play/pause/answer/hang up, long press for switching input mode/reject call. Double click for redialing.	Short press for next track, long press for volume up
TF CARD	Long press for speaker on/off	Short press for previous track, long press for volume down	Short press for play/pause. Long press to switch input mode.	Short press for next song, long press for volume up
AUX Line in	Long press for speaker on/off	Short press for previous track, long press for volume down	Short press for mute status, long press for switching input mode.	Long press for volume up.
FM	Long press for speaker on/off	Short press for previous track, long press for volume down	Short press for searching channels, long press for switching input mode	Short press for next channel, long press for volume up
	Clock buttons			
				
Clock	Short press for reducing	Short press for confirming or entering next	Short press for increasing	Short press for dimming. Long press for closing

		setting. Long press for confirming completely or exiting		showing
Alarm 1	Short press for reducing	Short press for confirming or entering next setting. Long press for confirming completely or exiting	Short press for increasing	Short press for dimming. Long press for closing showing
Alarm 2	Short press for reducing	Short press for confirming or entering next setting. Long press for confirming completely or exiting	Short press for increasing	Short press for dimming. Long press for closing showing