Osotto

2.1ch HIFI Bluetooth Multimedia System






HF42

Dear Customer,

 Thank you for purchasing this Osotto system. We trust that you will enjoy years of great sound from it. Please read this user manual carefully and keep it for future reference.



STANDBY--Standby switch

INPUT-----To select the input audio sources

MUTE-----Mute switch

PREV-----Previous song or FM program switch
PLAY/PAUSE-----Play and pause switch. When FM is selected, press to scan FM programs. Press for 3 seconds to change the flashing led mode

NEXT-----Next song or next FM program switch

VOL+ -----Volume enhance switch


VOL- -----Volume decrease switch

MODE-----Selecting woofer, bass, treble, microphone and echo options.

1-9/0/100+ -----Selecting music or FM programs.

0 ----- Flashing LED light on/off switch


Rear Panel

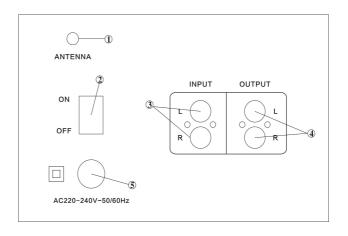

- 1.FM Antenna
- 3.Input left/right RCA jack
- 2.Power ON/OFF 4.Output left/right RCA jack
- 5.AC power cable

Page 2



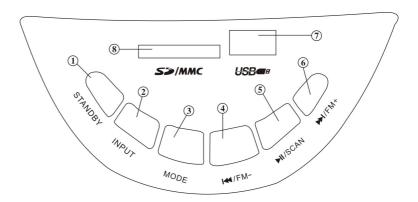

1. Standby key

- 2. Audio input source selection key
- 3. Mode key for adjusting bass and treble
- 4. Previous song or FM program. Press for 3 seconds to decrease volume
- 5. Play and Pause. When in FM radio mode, press to scan FM programs. Press for 3 seconds to change the flashing LED sequence.
- 6. Next song or FM program, press for 3 seconds to increase volume.
- 7. USB slot
- 8. SD card slot

If the USB/SD doesn't work first time, please turn off the power, wait for one minute and then restart the system.

Page 3

- 1.Built-in OCL amplifier, compatible with Computer, CD/VCD/DVD player, iPod, phone, etc.
- 2.Magnetic shielded design allows the system to be configured with TV sets and computers.
- 3. Super Bass Hi-Fi system gives a larger dynamic range in the low frequency, a smoother middle frequency and a pure and harmonious high frequency.
- 1.Please connect the sound sources, speakers and power in accordance with the sketch above.
- 2. When the speakers and sound source are connected correctly, turn on the power.
- 3. Adjust the volume and audio settings to your own preference.
- 4. After use, please turn off the power supply and disconnect from the mains.

- 1.Please turn the volume knob to the minimum position before operation to prevent any damage to the speakers
- 2.Please avoid humid environments and moisture
- 3.Do not open the back cover of the main speaker in case of electric shock or invalidating the warranty
- 4.Please turn off the power switch and unplug the device if you do not intend to use the system for longer periods.

Subwoofer 1pc
Satellite speaker 2pcs
Audio cable 1pc
Remote control 1pc
User manual 1pc

Osotto Ltd 5 High Street CF37 1QJ www.osotto.co.uk

Page 4